

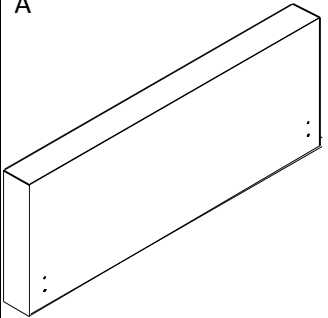


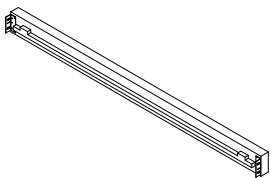


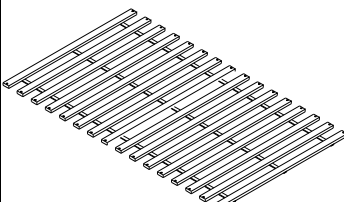
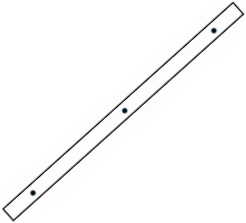


west elm

Harmony Bed Assembly Instructions

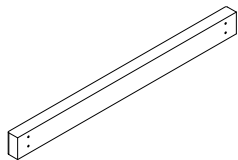


<p>A</p>  <p>Headboard</p>	<p>B</p>  <p>Side Rails - Qty (2)</p>	<p>C</p>  <p>Footboard</p>	<p>D</p>  <p>Qty (8)</p>
<p>E</p>  <p>Qty (8)</p>	<p>F</p>  <p>Qty (8)</p>	<p>G</p>  <p>1" Slat Screw Inside Slat Kit</p>	<p>H</p>  <p>Hex Key</p>
<p>I</p>  <p>Roll Slat Kit</p>	<p>J</p>  <p>Center Support Traverse Rail</p>		

Step 1. Side Rail Connection To Headboard and Footboard

Line (2) side rails up between headboard and footboard. Align holes in bracket to predrilled holes in headboard and footboard. Add a lock washer onto the bolt, followed by a flat washer. Using the hex wrench provided, insert bolt with washers through the bracket and into the preinstalled threaded inserts in the headboard and footboard. Image below.

Do not tighten bolts all the way. Install all 8 bolts to ensure the bed is square, then return to tighten each bolt firmly.

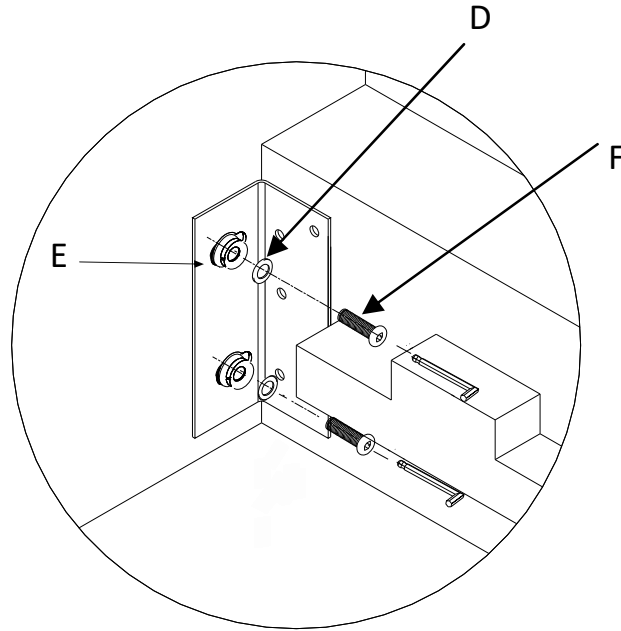

Step 2. Slat Installation

Screw center support legs into center support traverse rail. Attach center support to preinstalled brackets on the headboard and footboard. Roll out wood slats onto center support and side rail supports. Use wood screws to attach slats to support rails.

